

C	1	2	6	8	12	11	17	16	20	19	31	23	29	34	32	30	36	47	51	46	49	52	70	48	53	54	45	58	61	62	56	57	68	69	72	74	73	77	86	76	83	79	87	13	14	65	C
L	5	3		7	6	9	10	13	11	12	16	17	21	22			18	19	20	23	24	28	31	32	26	28	55	59	63	68	69	72	73	78	86	76	83			33	L						
R	1	5		3	6	4		8	7	9	11	15	13	14	49	20	30	17	22	21	25	18	48	28	26	27	38	35	16	34	33	32	36	2	39	44	46	47	41	39	R						
MISC	V1			V2	S1b	S1a		S1c	S1d	S1f	S1g	V3	S1e			S1n	S1i	V4	S1k			S1l	P.U.	V5a	S1m	V5c	V7	S1n	T1	V6	V8	T2	PL1	PL2	MISC												

A252

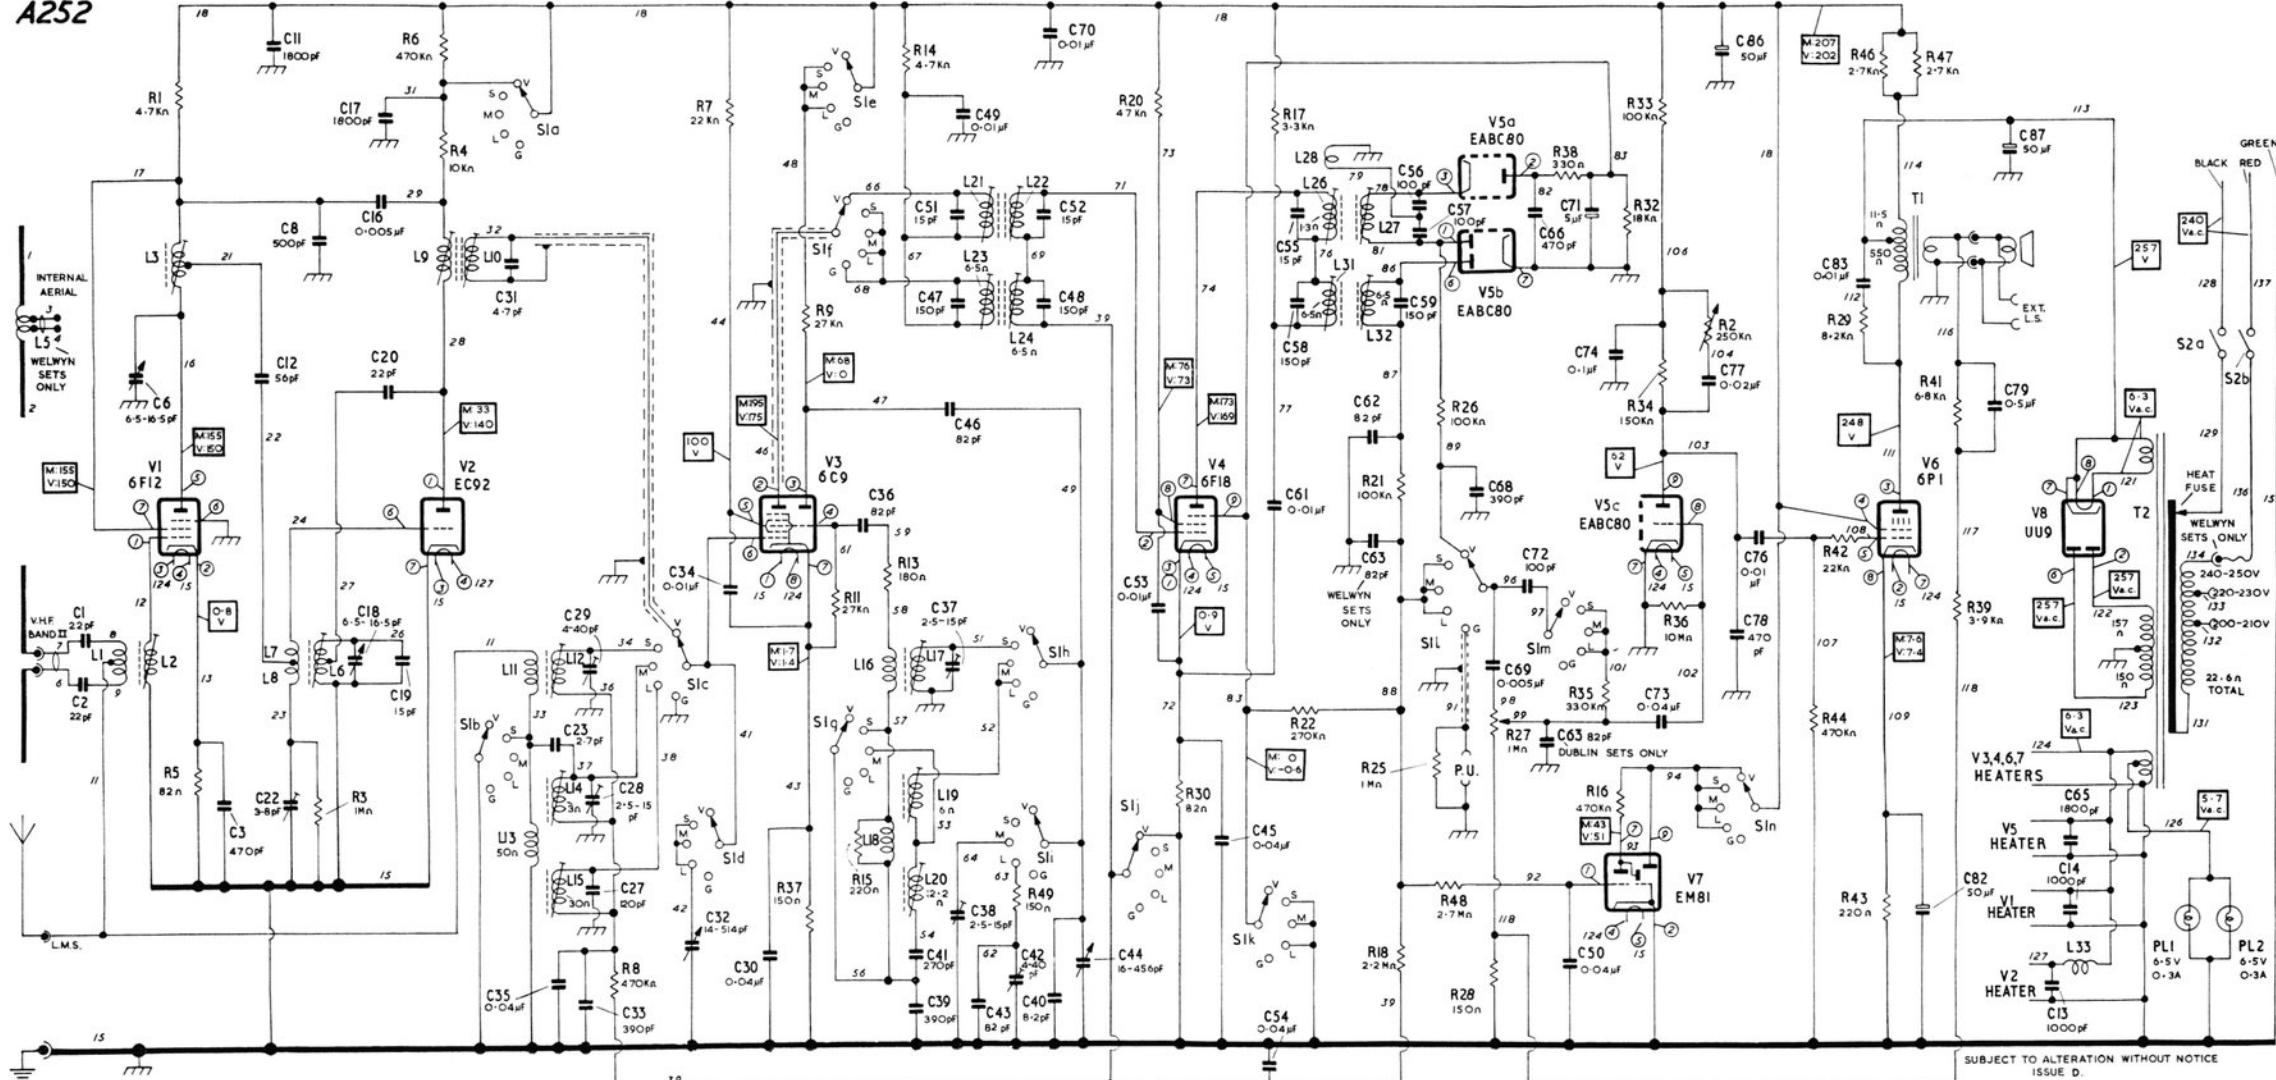


Fig.6. The circuit diagram.

The wave-range switch (S1a-S1n) is shown in the Band II (V) position. Circuit voltages are shown within rectangles and were measured under no signal conditions using a 20kΩ/V meter, with the receiver switched first to the M band and then to Band II (V). Where readings differ appreciably, both are quoted with the M band reading at the top.

Where the resistance of a coil is less than one ohm, the value is omitted. Component terminals and connecting leads are identified by test point (t.p.) numbers which correspond with those appearing on the chassis diagrams. The valve pin numbers are shown in small circles.